




DURO-LAST, INC.

525 Morley Drive
Saginaw, MI 48601

4200 INSTALLATION

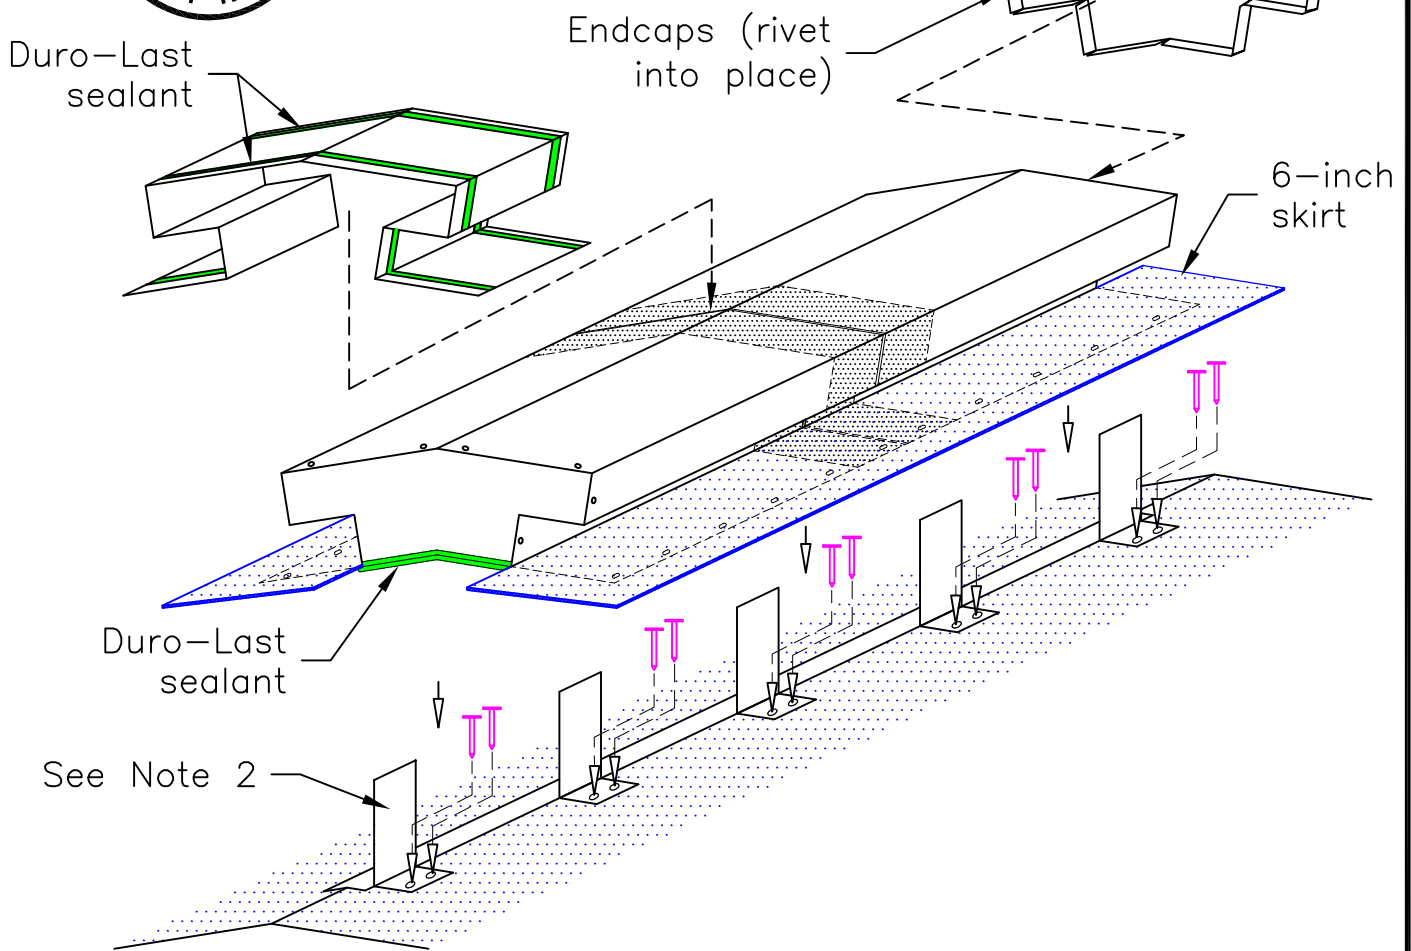

- Note 1: Fasten the deck membrane at the peak opening to secure membrane in place.
- Note 2: Install the 16 GA. support chair brackets 5-foot on center along the length of the ridge vent.
- Note 3: Install the splice plate by locating the center of the ridge vent joint. Apply a bead of sealant on both sides of the joint. Do not fasten the splice plate to the ridge vent.
- Note 4: Install endcaps into position with rivets as illustrated above. Apply sealant to the inside at the joint and rivets as well as a bead of sealant on the bottom edge of the endcap where it meets the roof peak as illustrated above to ensure a water-tight application.
- Note 5: Install the ridge vent over the splice plate. Be sure to leave a 1/4-inch gap between section to allow for expansion and contraction.
- Note 6: Fasten the ridge vent to the deck with Duro-Last approved fasteners 6-inches on center and weld the skirt to the deck membrane.