




DURO-LAST, INC.

525 Morley Drive
Saginaw, MI 48601

6056 INSTALLATION

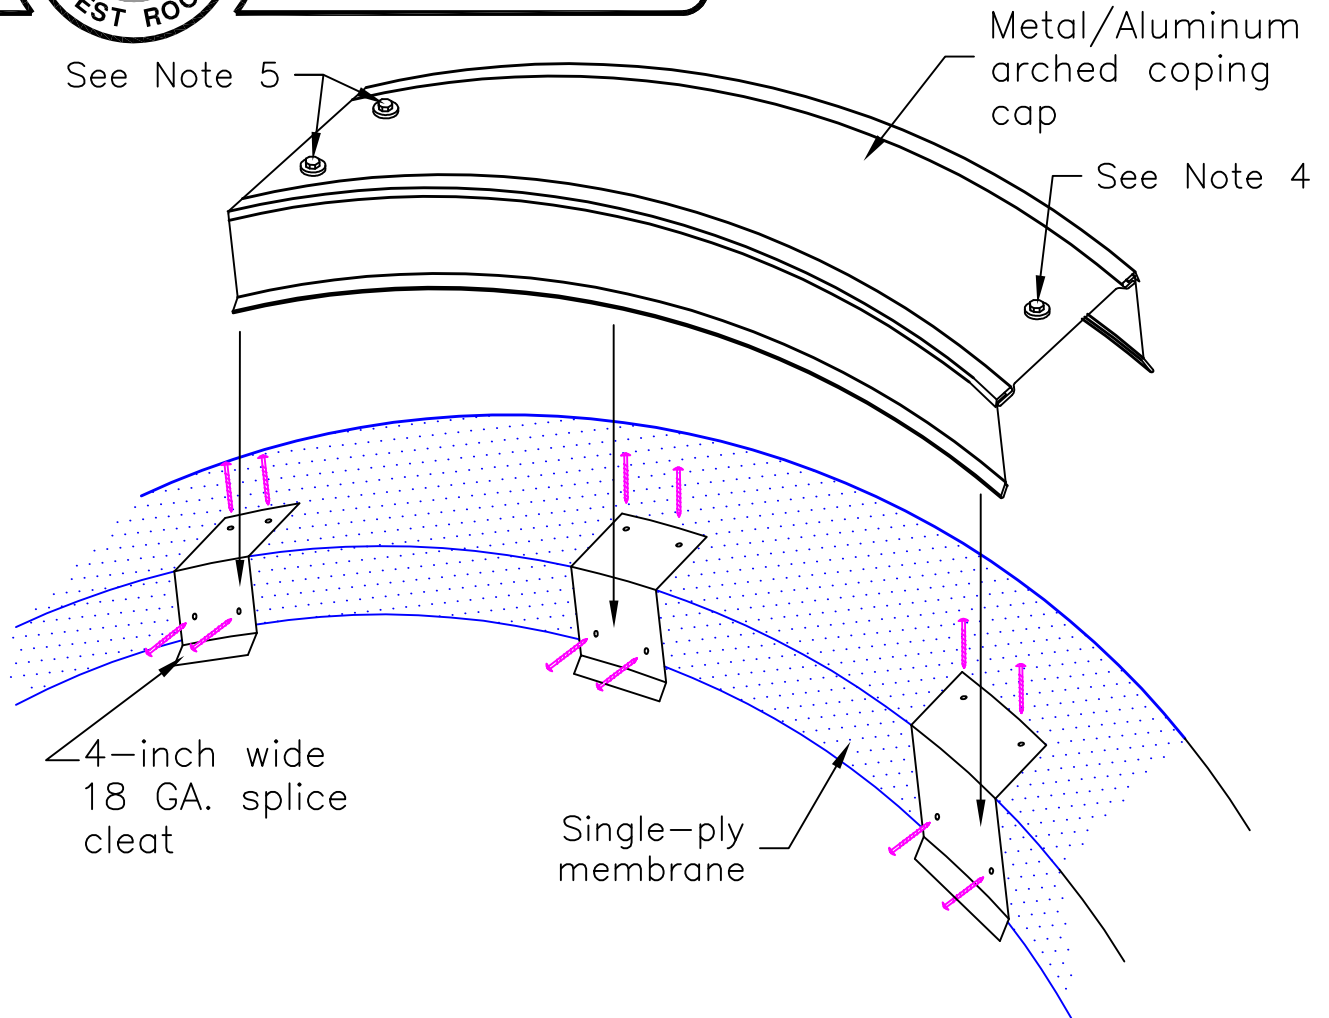

Note 1: Install 4-inch wide splice cleats 24-inch on center using four Duro-Last approved fasteners (must position a cleat at each joint).

Note 2: When more than one arched coping cap is used, install the cap to shed water down the arch by centering one section at the top of the arch.

Note 3: Additional arched coping sections are pre-notched to provide an overlapped joint. Apply an approved sealant at all coping joints.

Note 4: Coping 16 to 24-inches wide will require a row of Hex-head screws with neoprene washers in the center.

Note 5: Coping 25-inches or wider shall require two rows of Hex-head screws with neoprene washers. All fasteners shall be installed at 18-inches on center along the length of the coping.